 
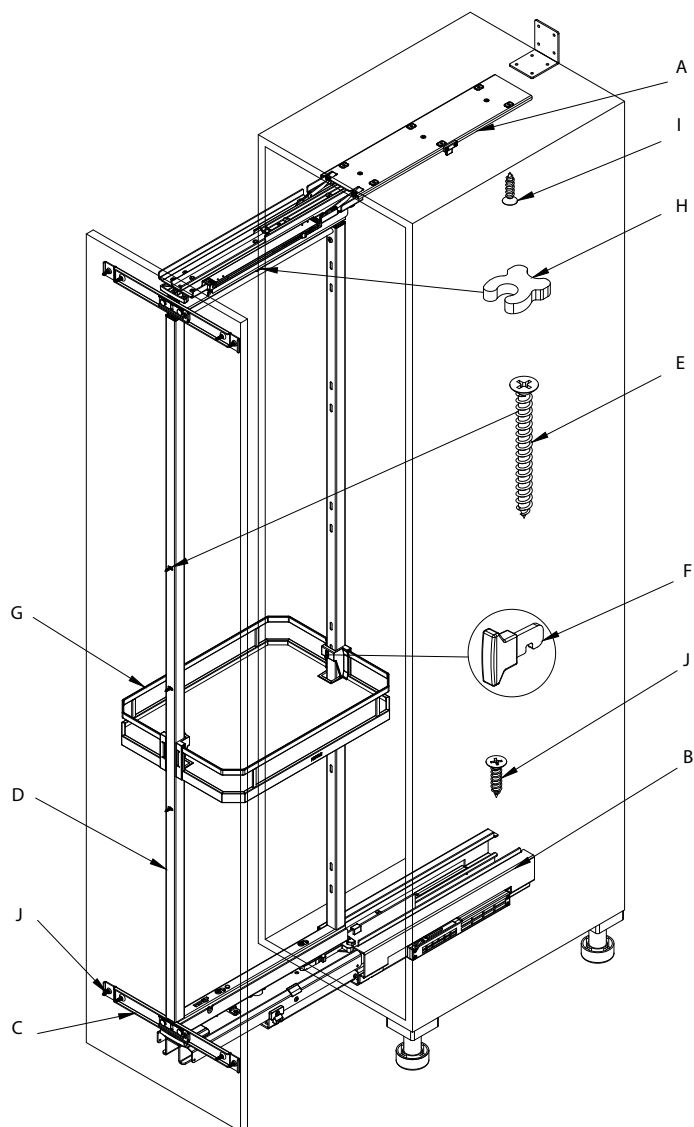 


VC4366 COLUNA EXTRAÍVEL E GIRATÓRIA

Applicative Width	Specification w*d*h(mm)	Tier
400	340*480*(1780-2080)	6
400	340*480*(1430-1730)	5

 
Accessory List:

- A: top slide
- B: bottom slide
- C: joint parts to door
- D: main frame
- E: ST4*40 wood screw (3X)
- F: plastic hook (five layers is 10X, six layers is 12X)
- G: baskets (five layers is 5X, six layers is 6X)
- H: Plastic clip spring (1X)
- I: ST4*16 wood screw (6X)
- J: ST5*18 wood screw (13X)

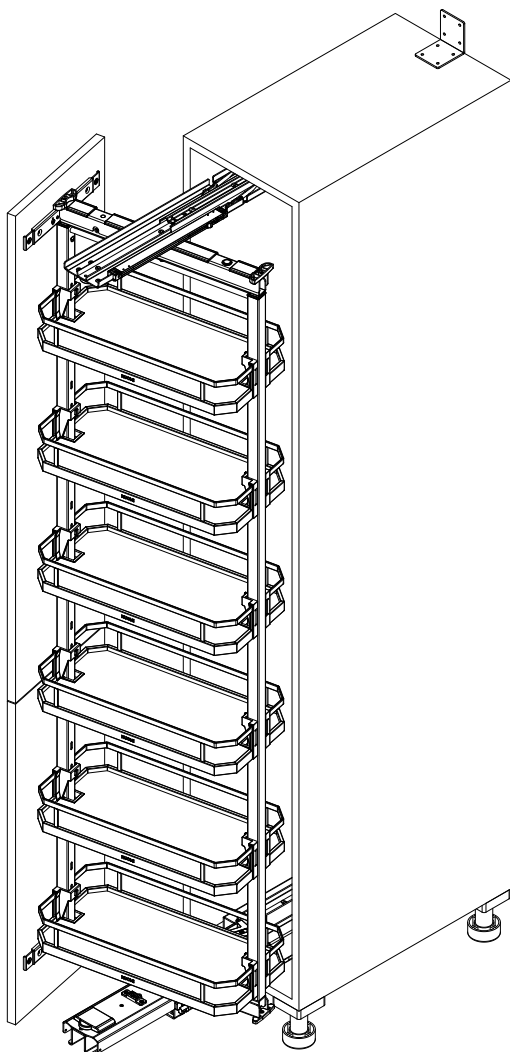


1. Fix the top slide (A) by using

6 pcs screw I to fix up

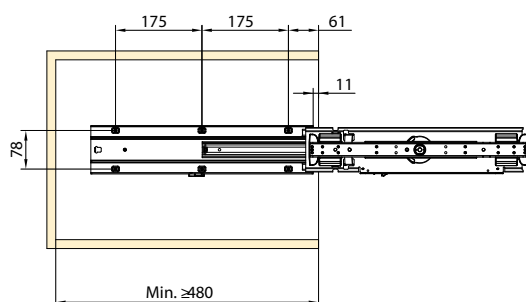




2. Fix the bottom slide (B) by using

 5 pcs screw J to fix up




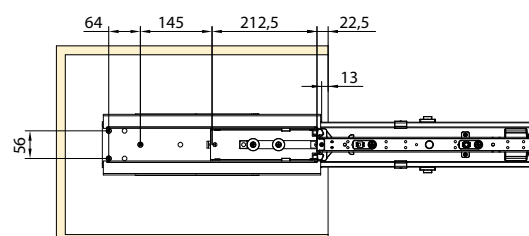


3. Fix jonit parts to door sheet (C)

  
 
by using 8 pcs screw J

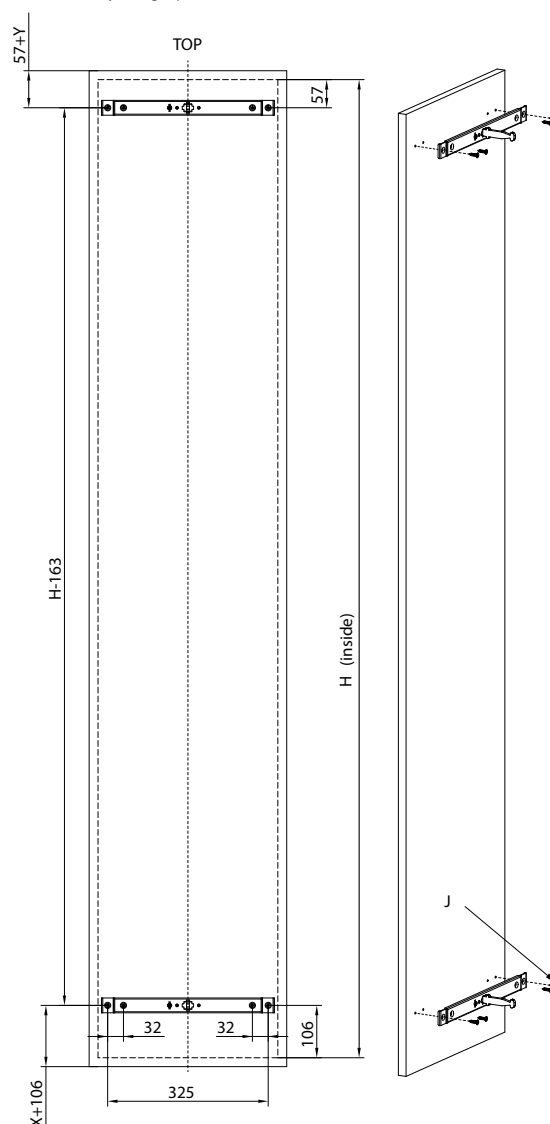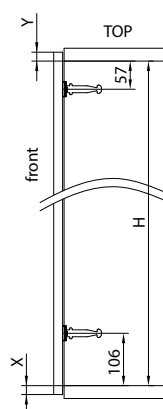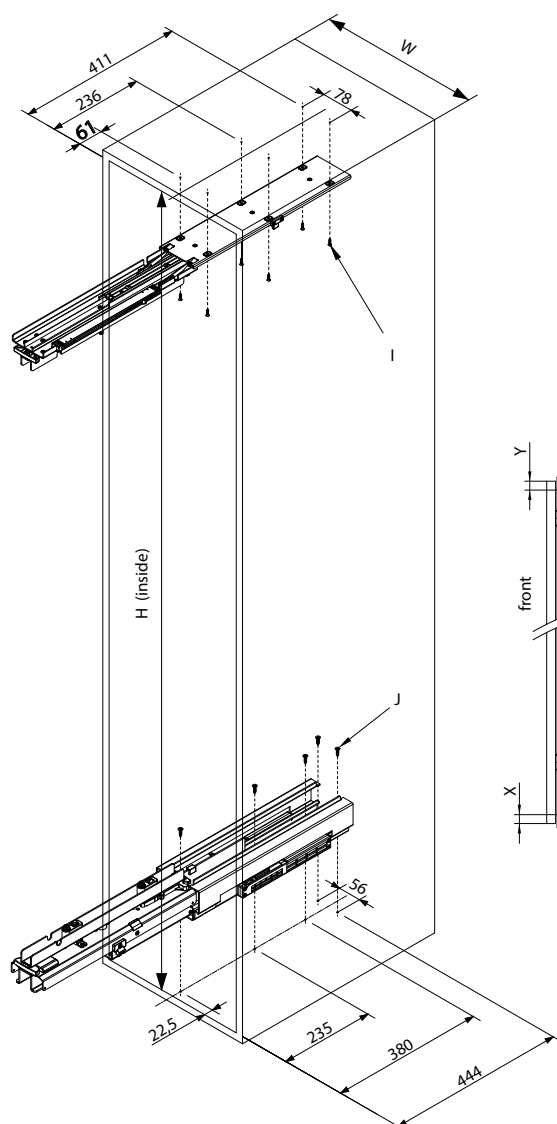

    
4. Fix main frame (D)

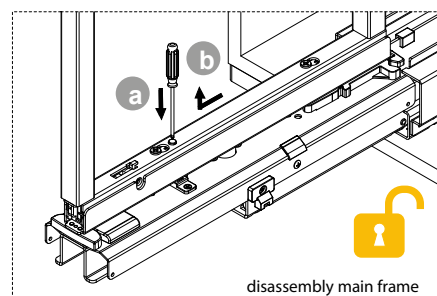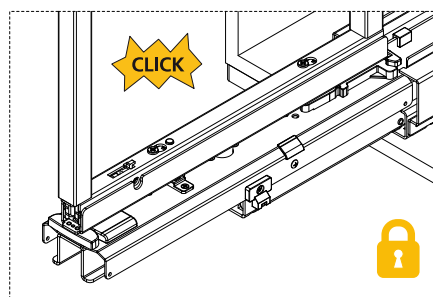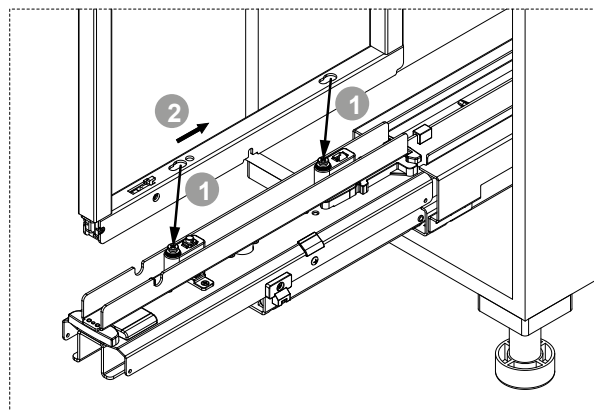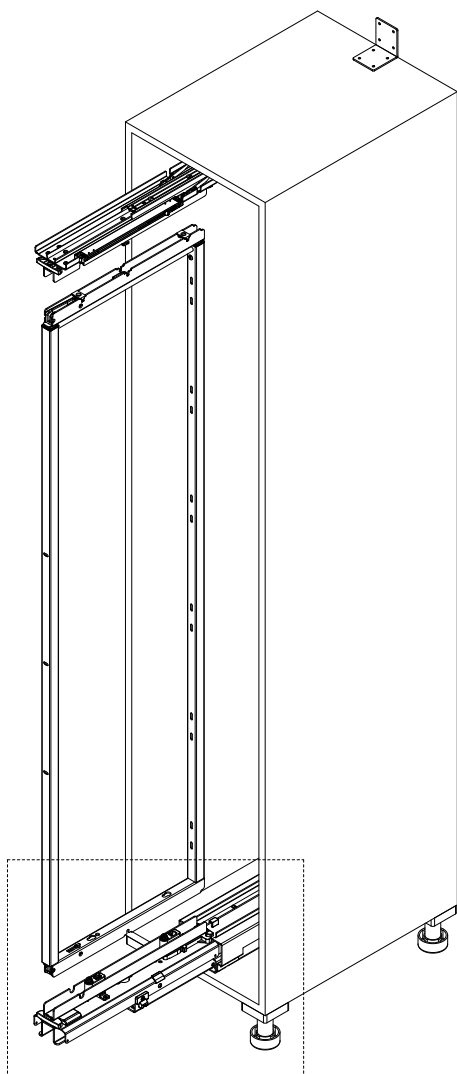










disassembly main frame

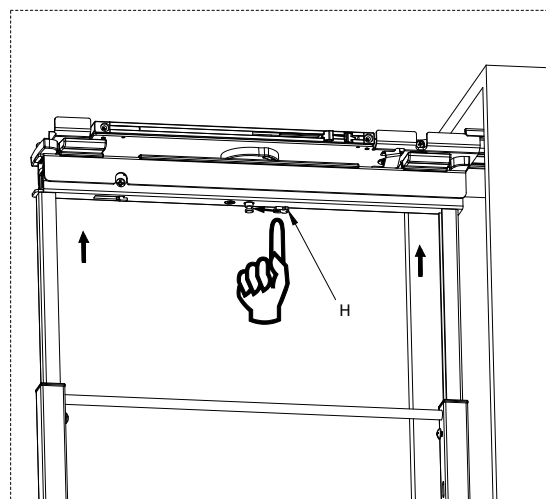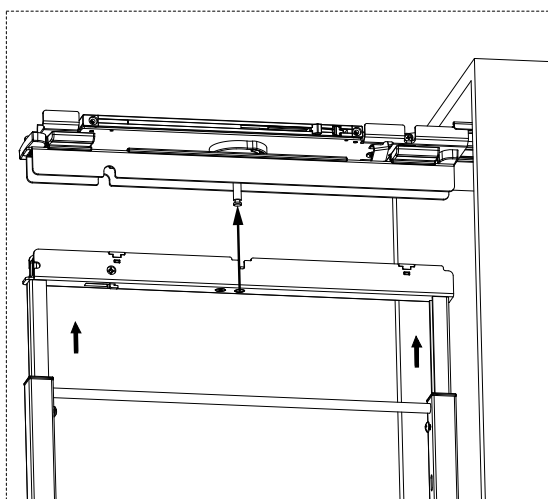  

 
5. Fix the jonit parts to door sheet

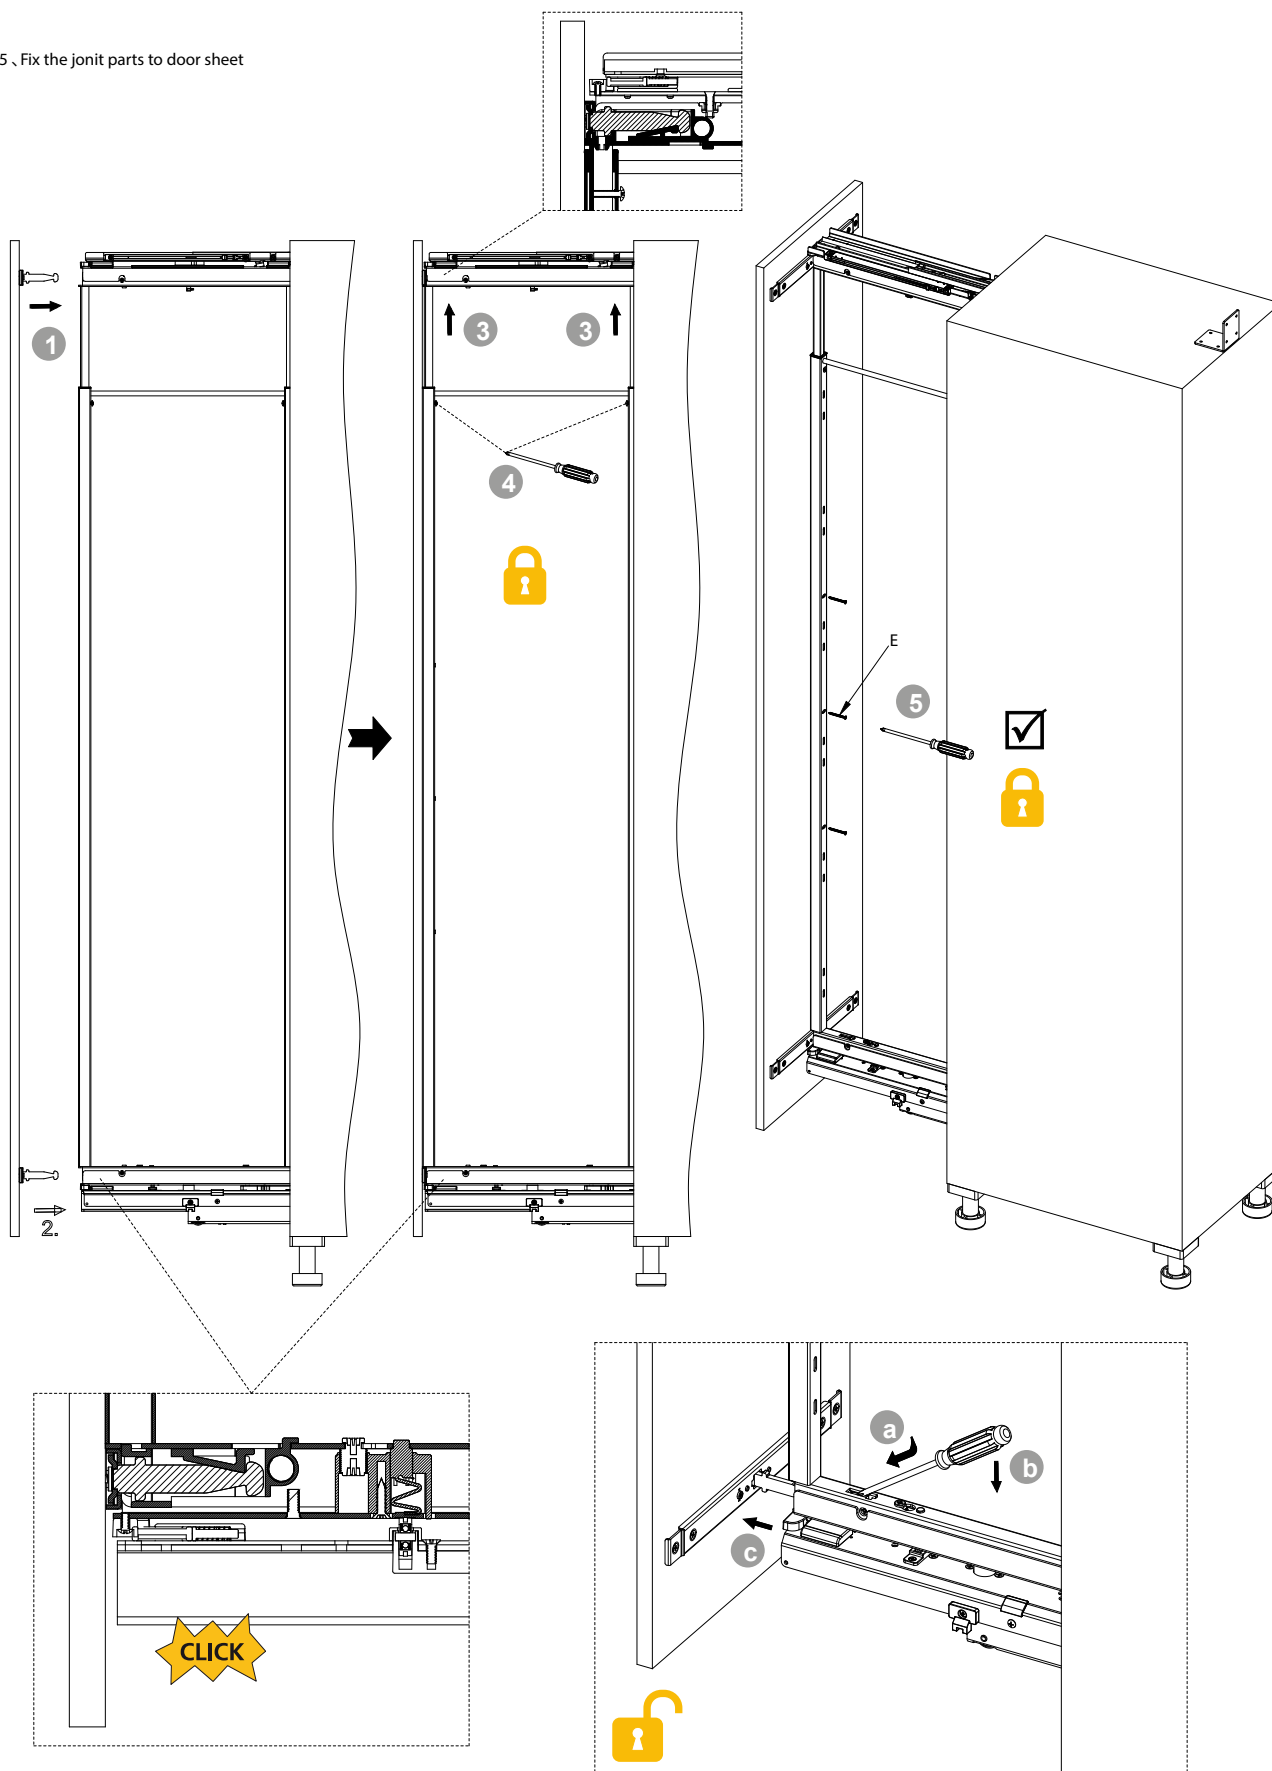

         6. Adjusting the door panel

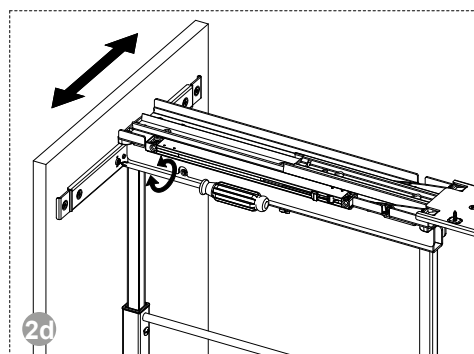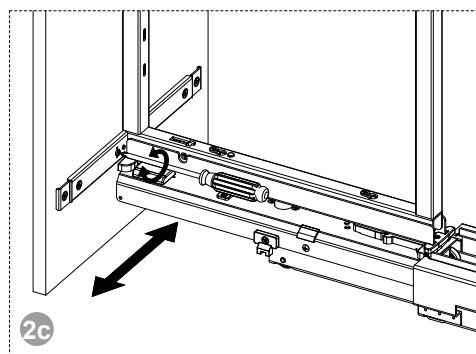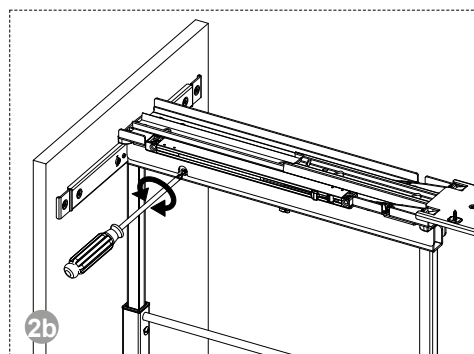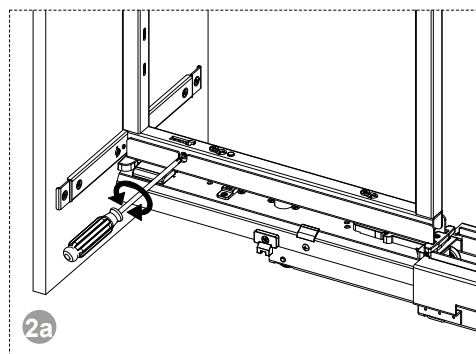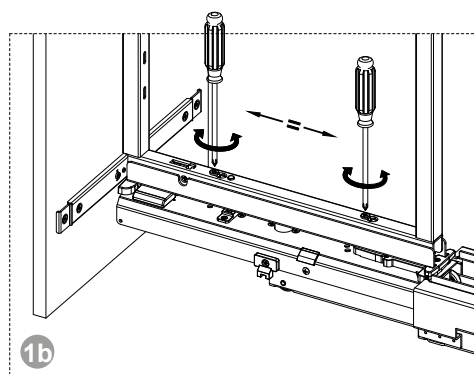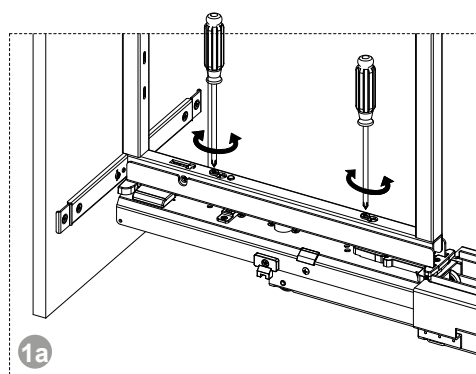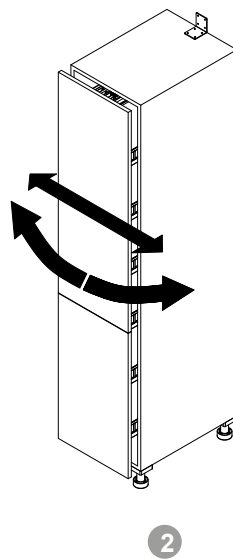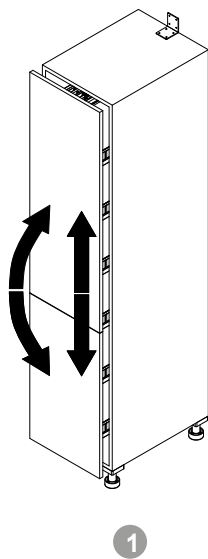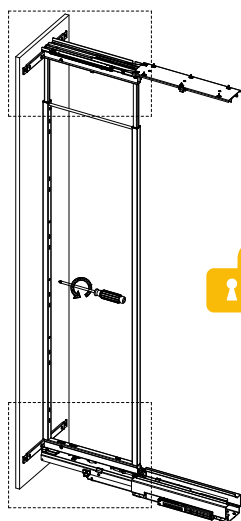


 7. Fix the baskets

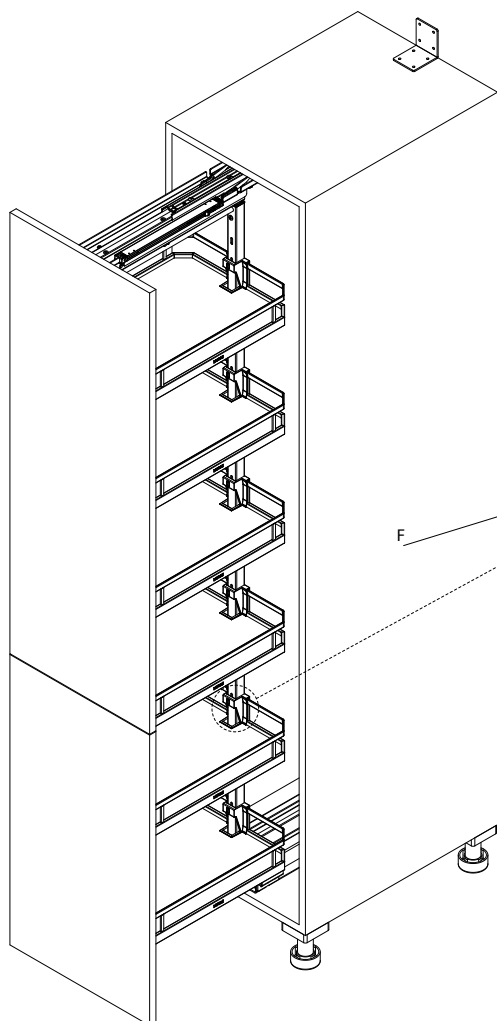


8. Finish instruction

 
Note: Disassembly is carried out in reverse steps.

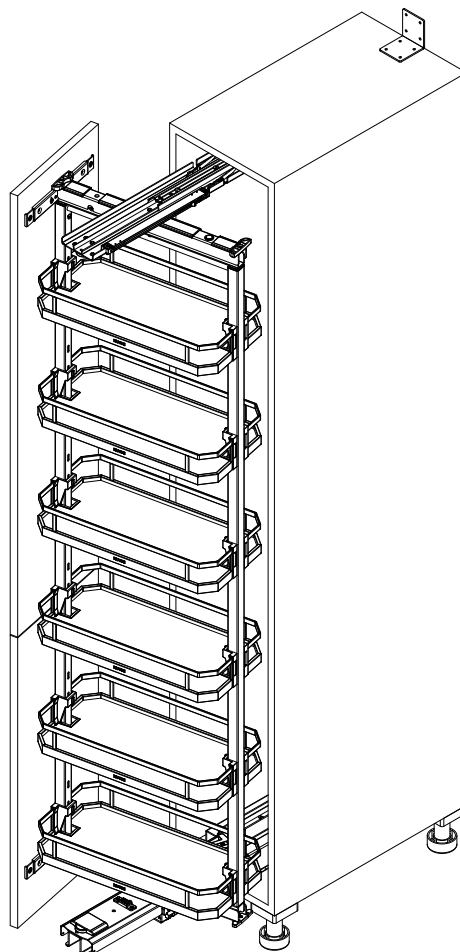


Left rotation

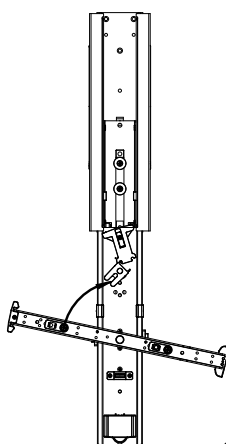 

 The incorrect state of the pendulum block

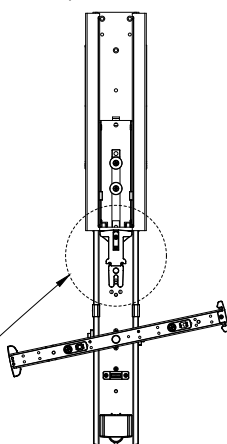

Right rotation

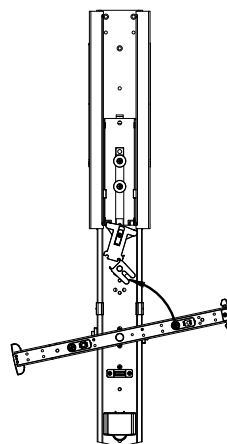 

Note: When the pendulum block is in an incorrect state after rotate of the main frame, the pendulum block should be turned to the state of left rotation or right rotation (as shown in the picture), otherwise the main frame cannot be normal.