

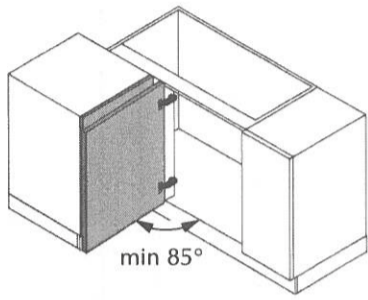


CABINET WITH VERTICAL WOODEN CROSS

CABINET WITHOUT VERTICAL WOODEN CROSS

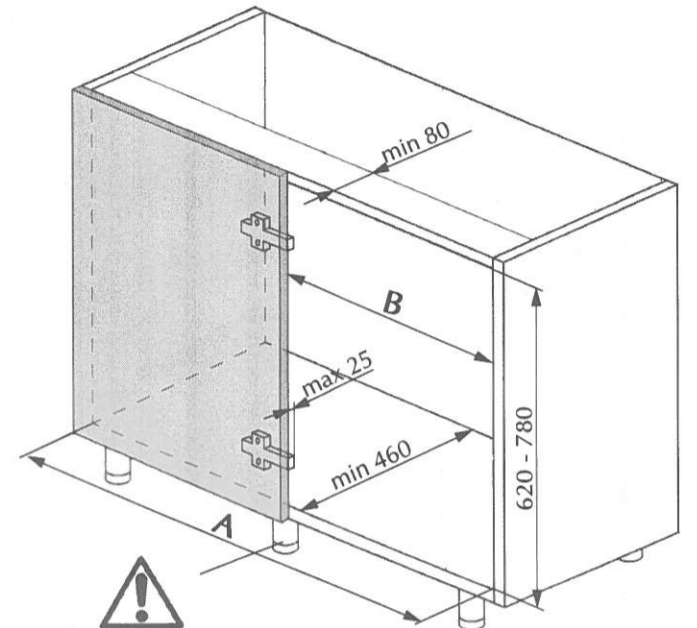


|         | A          | B          |
|---------|------------|------------|
| MOD 400 | min 760 mm | min 360 mm |
| MOD 450 | min 860 mm | min 410 mm |
| MOD 500 | min 960 mm | min 460 mm |
| MOD 600 | min 960 mm | min 560 mm |

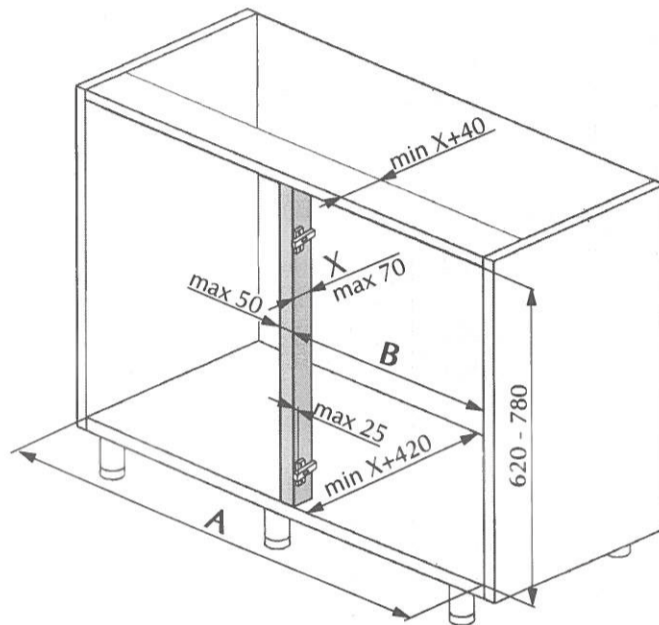


**1** CABINET WITH VERTICAL WOODEN CROSS



CABINET WITHOUT VERTICAL WOODEN CROSS

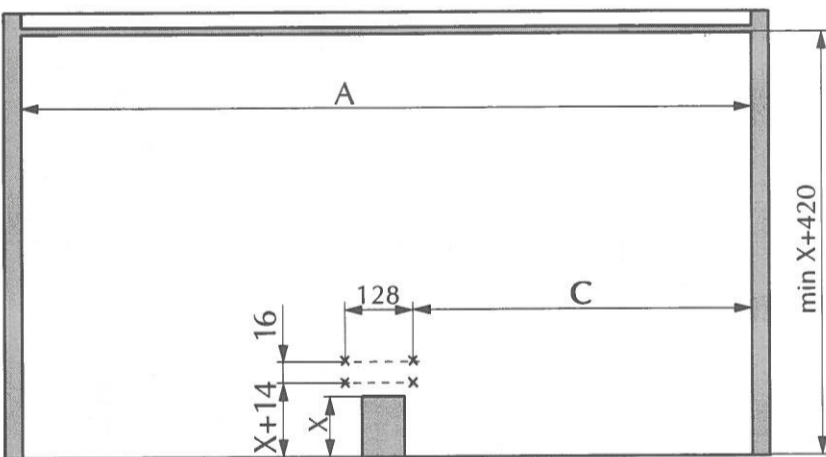



|         | A          | C      |
|---------|------------|--------|
| MOD 400 | min 760 mm | 326 mm |
| MOD 450 | min 860 mm | 376 mm |
| MOD 500 | min 960 mm | 426 mm |
| MOD 600 | min 960 mm | 526 mm |

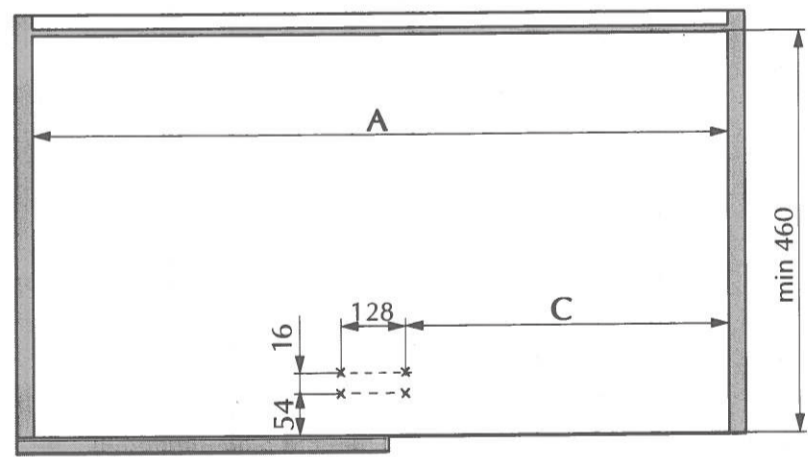







|         | A          | C      |
|---------|------------|--------|
| MOD 400 | min 760 mm | 326 mm |
| MOD 450 | min 860 mm | 376 mm |
| MOD 500 | min 960 mm | 426 mm |
| MOD 600 | min 960 mm | 526 mm |

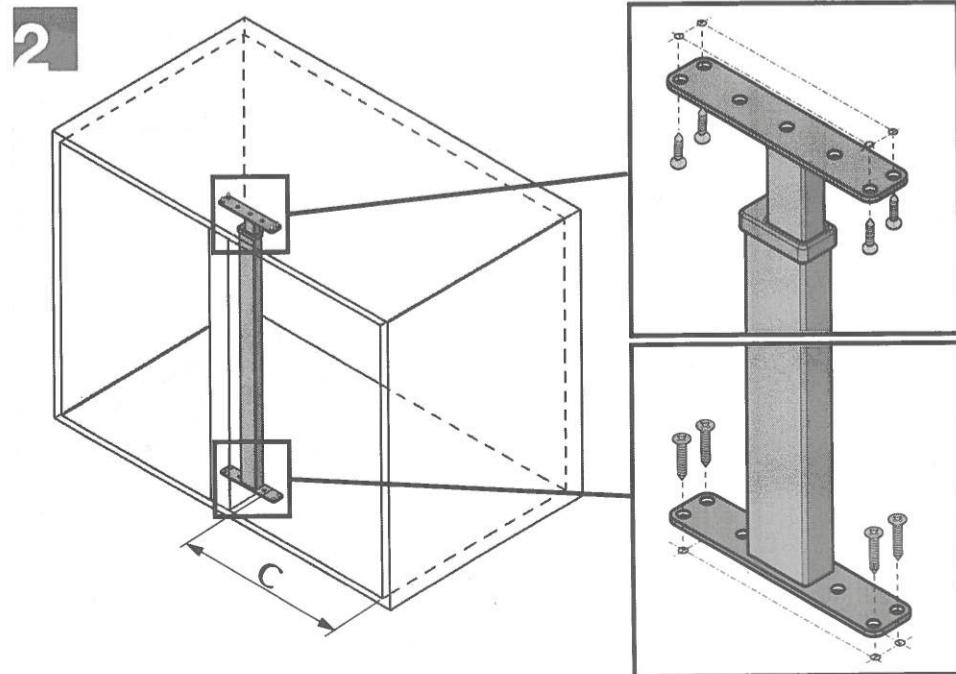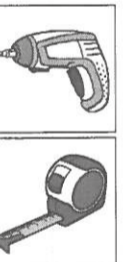



Screws not included.

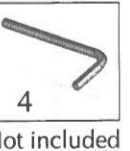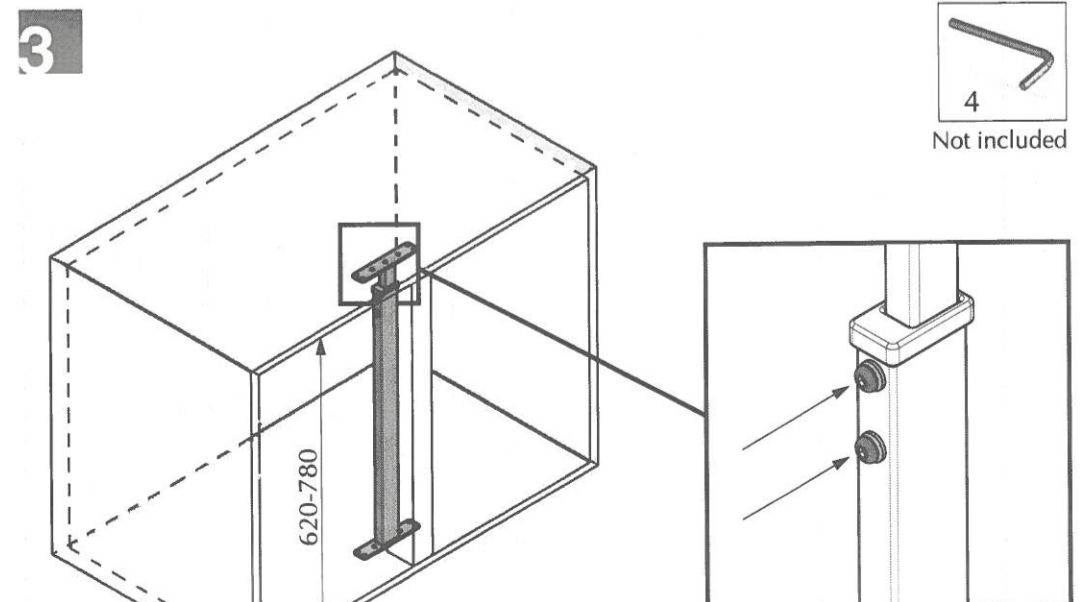




4

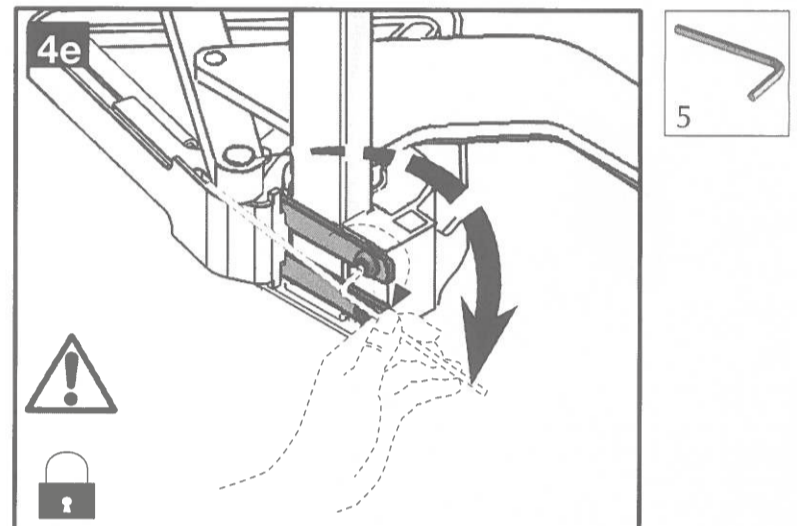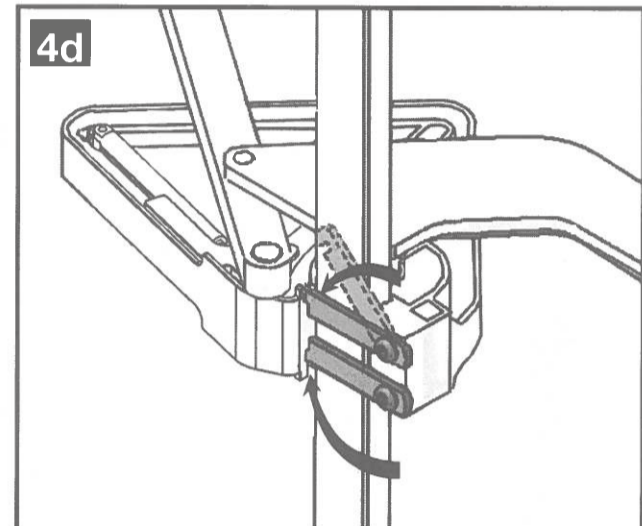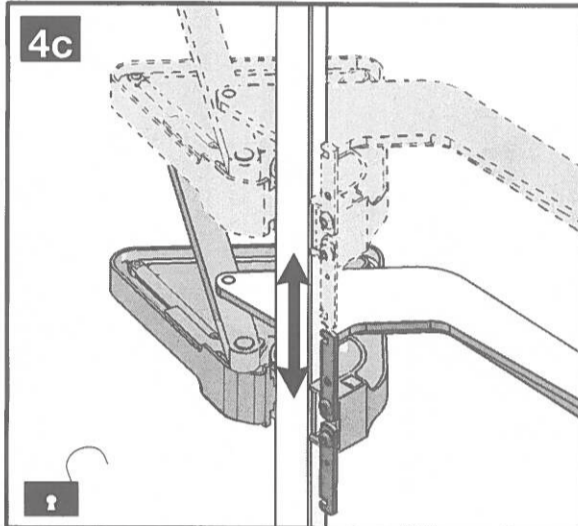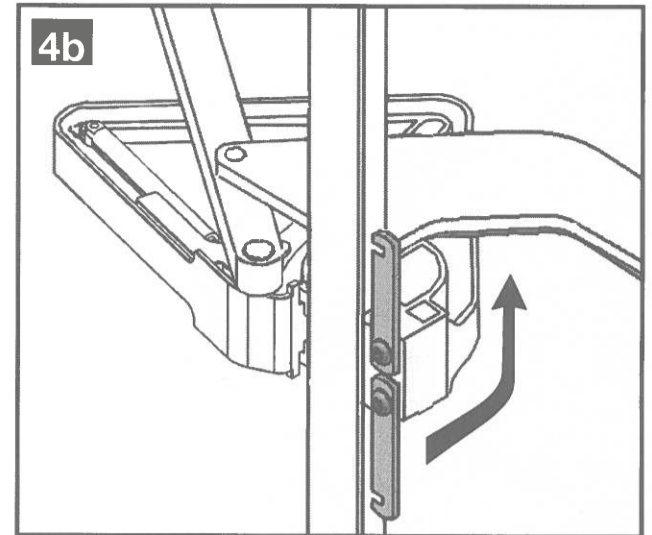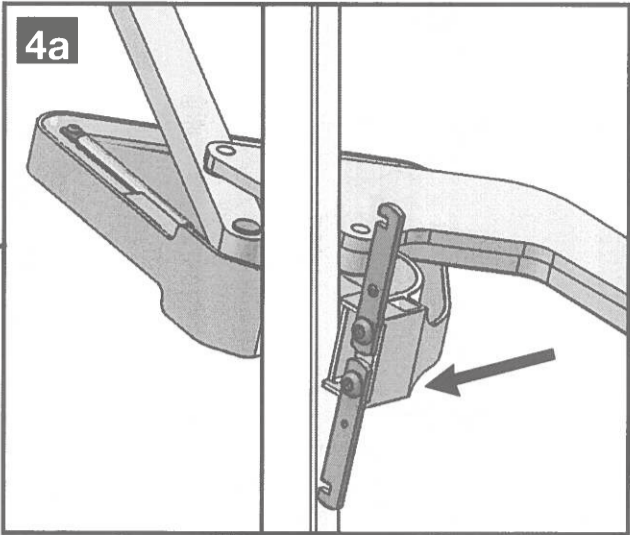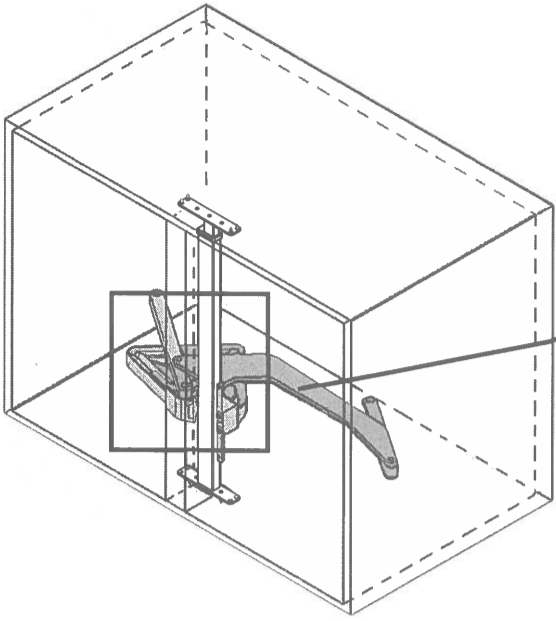

5

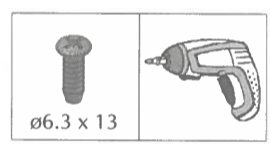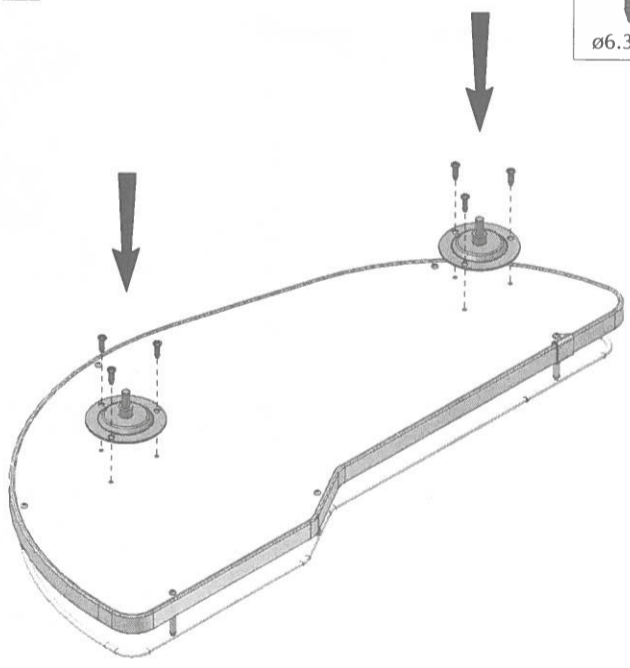

6

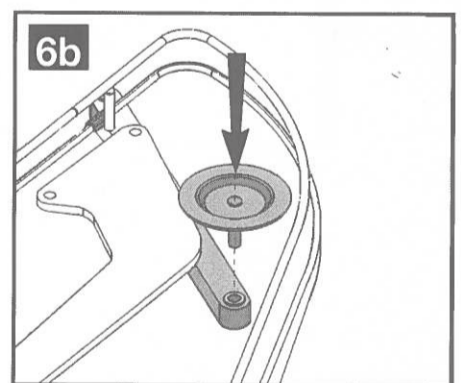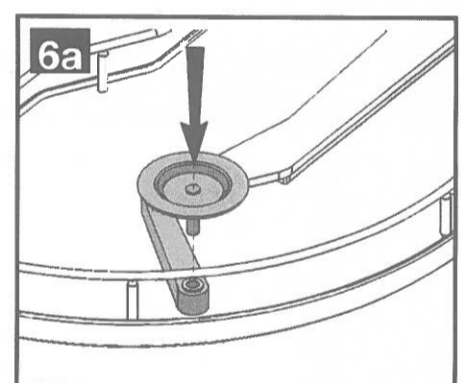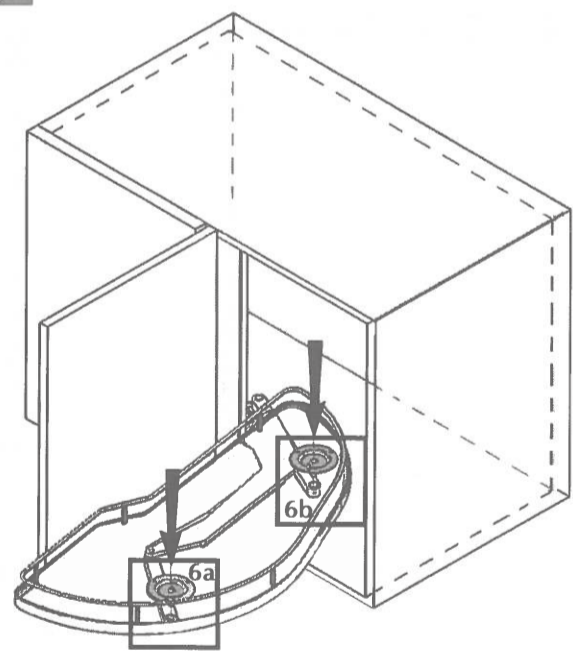

7

