


VC4351 COMPASSO PARA PORTA ELEVATÓRIA

Parts List

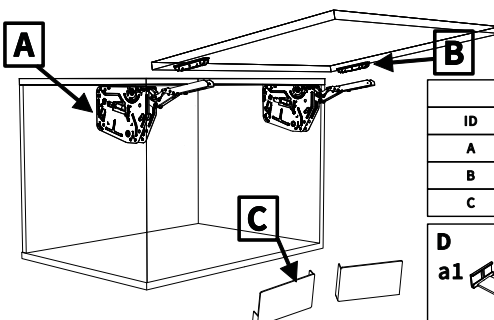

ID	Name	NO
A	Body lift	2
B	Bases	2
C	Body cover	2



a1 a2 a3 x1

G x1

E x8


4x38mm

F x8


4x14mm

Special Installation Cases


I

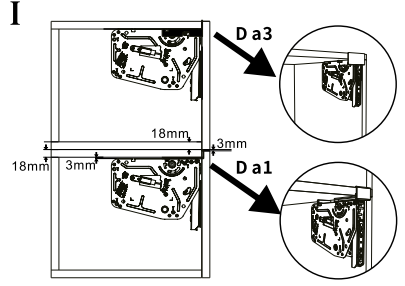

II

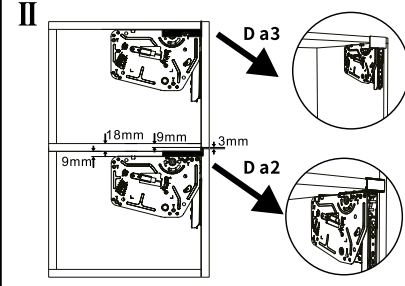


III

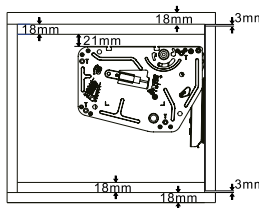


When the door height is equal with the cabinet net height, the lift installation should be moved down 21mm, to prevent collision between top and bottom edges of cabinet doors

FAO : Top panel size
SFA : Side panel size
F: Gap

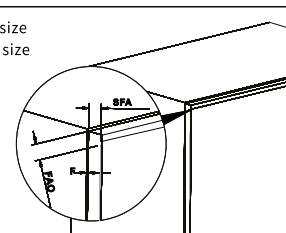

min 3mm

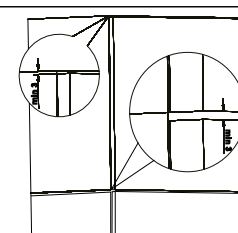


Normal Installation Case

WARNING


Don't press down on lever if the front is not be installed, to avoid injury and damage to the lift.




1 Panel Positioning and Drilling

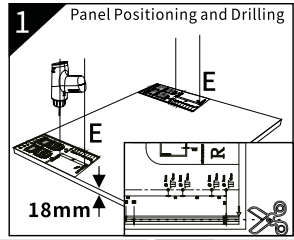


2 Installation Bases

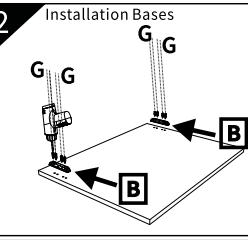


3 Install Positioning Card

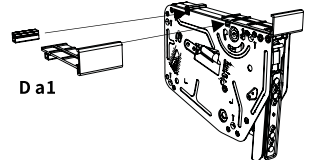


4 Put on the Lifts

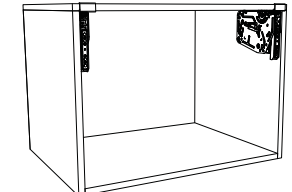


5 Lifts Installation

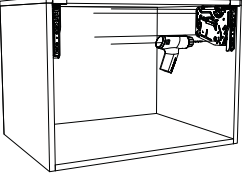


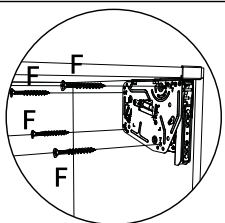


6 Remove the Positioning Card

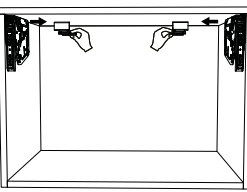

7 Remove the Safety Clip

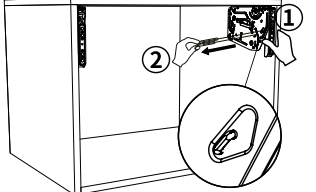

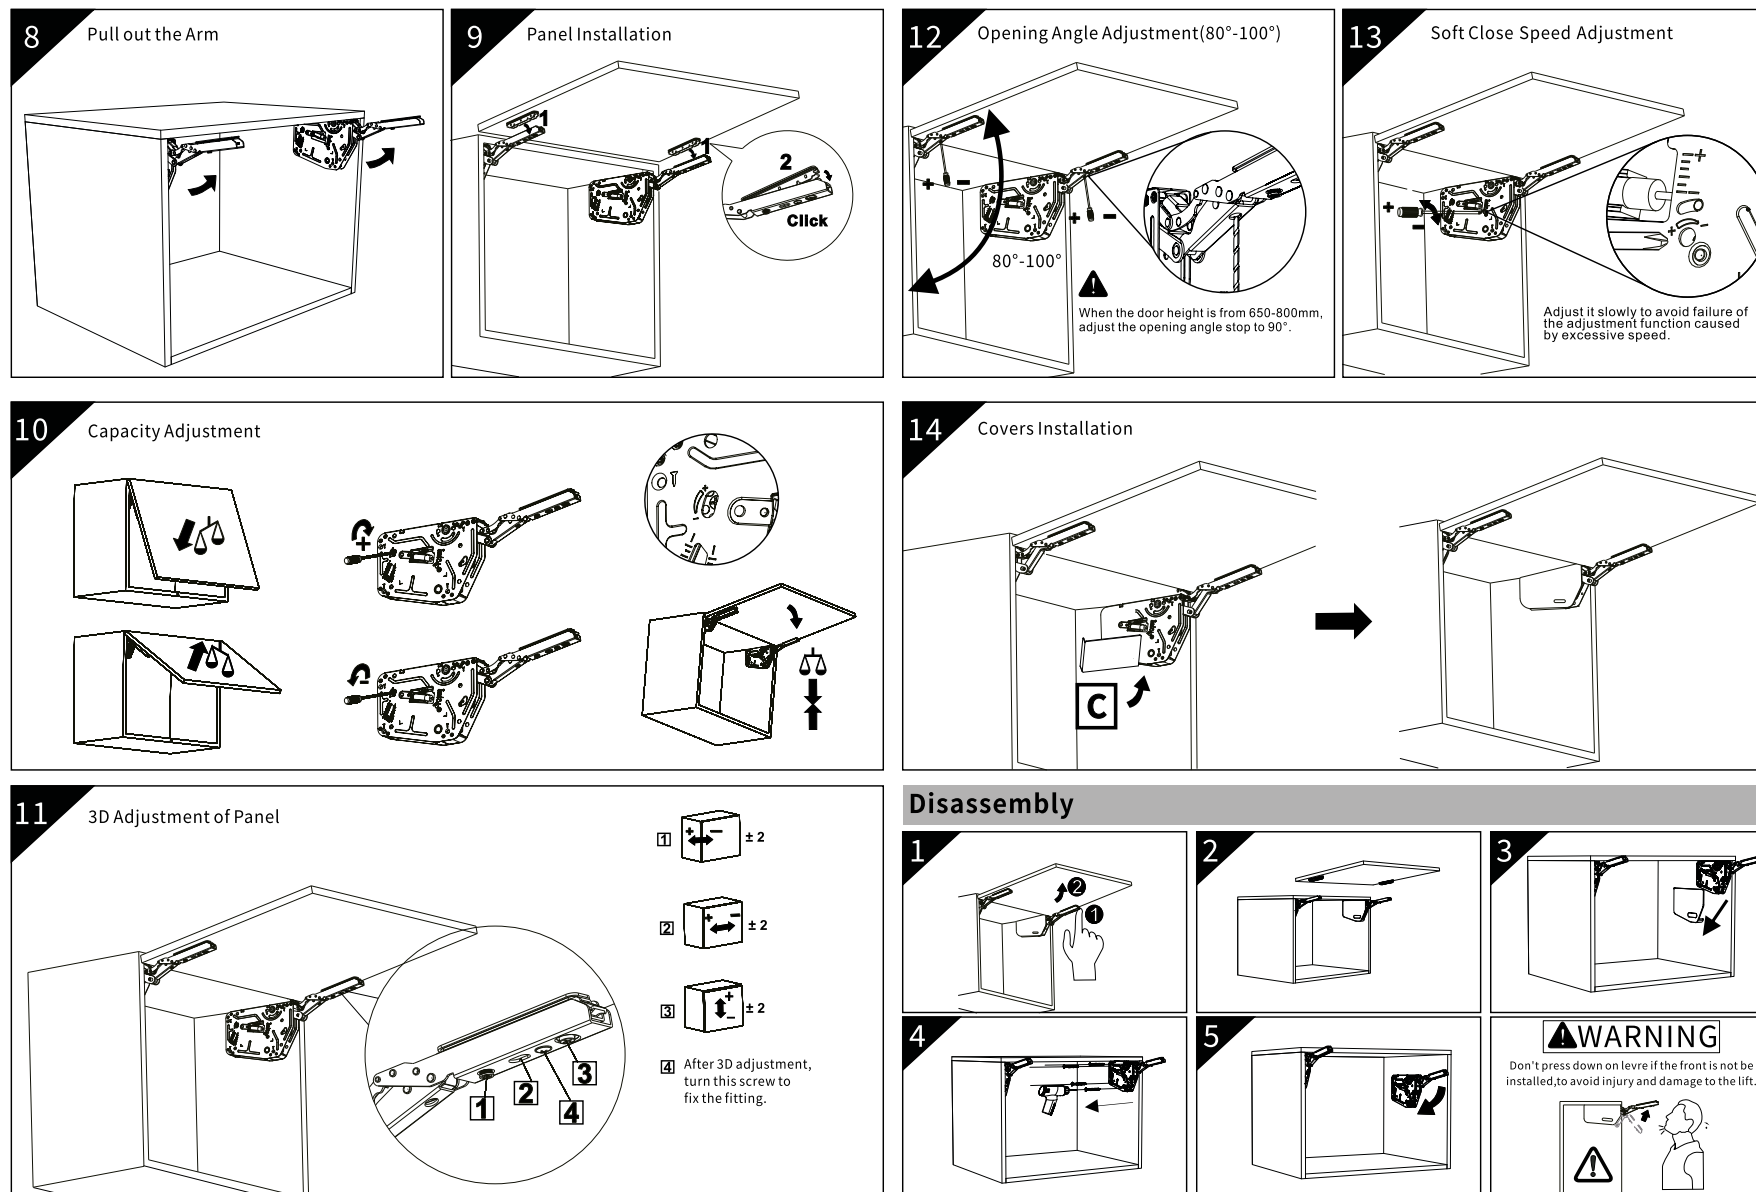

F = H x (Door weight + 2 x Handle weight)

F = Force

H = Door height in mm.

Door weight = Weight of the door in kg.

Handle weight = Weight of the handle in kg.

Low (L) = 560 - 1800

Medium (M) = 1100 - 2900

High (H) = 1840 - 5200

Extra High (XH) = 4000 - 9000

		A														
		400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800
H e = 16 mm	250					L	L	L	L	L	L	L	L	M	M	M
	300			L	L	L	L	L	M	M	M	M	M	M	M	H
	350	L	L	L	L	M	M	M	M	M	M	M	M	H	H	H
	400	L	L	M	M	M	M	M	H	H	H	H	H	H	H	H
	450	L	M	M	M	H	H	H	H	H	H	H	H	H	H	XH
	500	M	M	M	H	H	H	H	H	H	H	XH	XH	XH	XH	XH
	550	M	M	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH
	600	M	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH
	650	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH	XH
	700	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH			
	750	H	H	H	XH	XH	XH	XH	XH	XH	XH					
	800	H	H	XH	XH	XH	XH	XH	XH	XH						

		A														
		400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800
H e = 19 mm	250				L	L	L	L	L	L	M	M	M	M	M	M
	300		L	L	L	L	M	M	M	M	M	M	M	H	H	H
	350	L	L	L	M	M	M	M	H	H	H	H	H	H	H	H
	400	L	L	M	M	M	H	H	H	H	H	H	H	H	H	H
	450	M	M	M	H	H	H	H	H	H	H	H	XH	XH	XH	XH
	500	M	M	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH
	550	M	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH
	600	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH	XH
	650	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH			
	700	H	H	XH	XH	XH	XH	XH	XH	XH	XH					
	750	H	H	XH	XH	XH	XH	XH	XH							
	800	H	XH	XH	XH	XH	XH	XH								

		A														
		400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800
H e = 22 mm	250			L	L	L	L	L	L	M	M	M	M	M	M	M
	300	L	L	L	L	M	M	M	M	M	H	H	H	H	H	H
	350	L	L	M	M	M	M	H	H	H	H	H	H	H	H	H
	400	L	M	M	M	H	H	H	H	H	H	H	H	XH	XH	XH
	450	M	M	H	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH
	500	M	H	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH
	550	H	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH	XH	XH
	600	H	H	H	H	XH	XH	XH	XH	XH	XH	XH	XH			
	650	H	H	XH	XH	XH	XH	XH	XH	XH	XH					
	700	H	H	XH	XH	XH	XH	XH	XH							
	750	H	XH	XH	XH	XH	XH	XH								
	800	XH	XH	XH	XH	XH										